



Manual

Wireless Mouse

**KM-206x
KM-206x Pro**





1	Scope of delivery	3
2	Safety	3
2.1	Intended use	3
2.1.1	Environmental	3
2.1.2	Disposal	3
2.2	General information	3
2.3	Danger and protection	4
3	Technical Data	5
4	Use	5
5	FAQ	8
6	Maintenance	8
7	Disposal	9
8	Warranty terms	10
9	Contact	11



1 Scope of delivery

1x Mouse
2x AAA batteries (only KM-206x)
1x USB cable (only KM-206R Pro)
Manual

2 Safety

2.1 Intended use

2.1.1 Environmental

This device is only for indoor use and for connecting to computers.

Don't use and store it inside humid rooms or near water

Don't use it close to source of heat. The additional heat could lead to overheating and fire.

2.1.2 Disposal

Don't dispose the product or the batteries in the regular bin.

Please read chapter 7.

2.2 General information

Please read this manual carefully before installing or use this product.



Keep this manual and pass it by passing of the product.

Please follow the instructions and warning of this manual before using the product.

The inobservance of this manual can effect violations and damage.

We disclaim liability for violations and damages caused by inobservance of this manual.

2.3 Danger and protection

Don't damage the cable.

Don't use the product with wet hands (May cause electric strike).

The use of keyboards and mice can cause health traumata of hands, wrists, arms, shoulders, neck and back.

Please take precautions against these traumata:

Adjust the sitting posture to have an ergonomic position of torso, arms and hands.



3 Technical Data


Connection	Wireless 2,4GHz USB Nano Adapter
Resolution	800/1200/1600 dpi
Sensor	Han World +KA8
Switch pressure	72 +/-5 g
Power	2x AAA batteries integrated rechargeable Li-Ion battery (only KM-206R Pro)
Max. transmission power	1 mW
Dimension	12,0 x 6,5 x 7,5 cm
Environmental temp.	0-45°C operation -15-55°C storage
Environmental humid.	10-90% operation < 93% storage

4 Use

1. Take out the product and check the package content for completeness or damages.

In case of missing parts or external damages, please contact your local dealer for replacement.

Please keep the original package for shipping in case of warranty case.

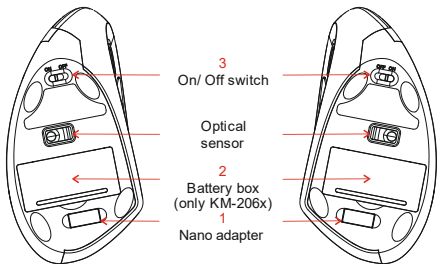

2. Take the Nano adapter (1) from the upper side of the mouse and plug it into a free USB port of your computer. You can use USB 2.0 as well as USB 3.0 ports.
3. Open the battery box (2), unpack the batteries and put them into the battery box. Take care of the correct polarity, written at the bottom of the battery box. Close the battery box.

Model KM-206R Pro must be charged with the included USB cable first. Connect it to a suitable USB Port.

4. Switch on the mouse using the switch (3).

The mouse will be recognized by OS automatically and is ready to use now,




The included batteries are for once-only use. Don't charge them when empty. It can cause fire.



Tip:

We recommend to switch off the mouse in case of longer non-use. Although the mouse will switch to stand-by after a while, it will increase life-time and respects environment.

5. The mouse has a couple of switches with different function. Please look below picture:

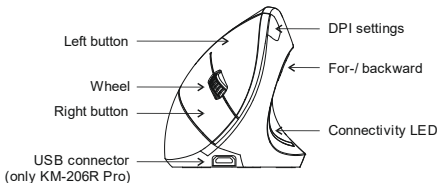

Buttons are mirror-inverted for model KM-206L.

Only model KM-206R Pro has an USB connector for recharging



5 FAQ

Fault	Reason	Help
Mouse don't work correct	No connection	Check Nano Adapter
	Mouse not on	Check switch on upper side
	Batteries empty	Check batteries
	Rechargeable battery empty	Recharge the mouse using the USB cable
	USB port defective	Check USB port using any other device on this port.
	Optical sensor dirty	Clean the sensor at the upper side
	Mouse defective	Connect mouse to another computer

6 Maintenance

The mouse needs no maintenance in general.

But dust can impair the optical sensor at the under side.
Clean the sensor sometimes by blowing it out.

Dirt on the upper side can be remove with a damp cloth.



Don't clean with a wet cloth. Water could get inside and causes a short circuit.

7 Disposal

Please dispose your product by using the special discharge point for electronic waste. Please ask your municipality or disposal company in case of further questions.

Model KM-206R Pro with integrated rechargeable Li-Ion battery can also be disposed by using the special discharge points for electronic waste. It's not necessary to take the rechargeable battery off.

Dispose cardboard and plastics from package according your local law.

Please follow also your local law about the disposal of batteries. Consumers are, according to the Battery Directive, obliged by law to return all spent batteries and/or accumulators. Don't dispose them with normal waste. The dustbin declares a separate handling. Symbols on batteries means:

Pb = Battery contains more than 0,004 w% lead
Cd = Battery contains more than 0,002 w% cadmium
Hg = Battery contains more than 0,0005 w% mercury
Please take care of the above.





8 Warranty terms

Inter-Tech grants 24 months warranty by proper use up from the date of purchase.

In case of warranty please contact your local dealer or the dealer from which you bought the product.

We will grant no warranty by:

- Missing or damaged warranty seal,
- Negligent behavior,
- Improper use,
- Nonobservance of the manual,
- External violence,
- Acts of god,
- Damages caused by manipulation, upgrading, updating or reconstruction of hardware or software
- Damages caused by other harm,

In case of data loss Inter-Tech will only be liable at wanton negligence or deliberate intention or, in all other cases, only for the recovery of data from a continuous, daily backup. Inter-Tech does not assume liability for all other matters.

Please look also at our complete warranty terms on our website.



9 Contact

Inter-Tech Elektronik Handels GmbH
Hainhäuser Weg 93
D-30855 Langenhagen
Germany
Tel: +49 511 72667830, Fax: +49 511 72667837, Email:
vertrieb@inter-tech.de - Web: www.inter-tech.de

This product contains a RF remote control. The transmission happens on an open channel so that interferences can't be excluded. The transmitting power depends on environment and neighborhood.

Inter-Tech declares hereby, that this product meets the general requirements of the directives RED 2014/53/EU and RoHS 2011/65/EU. The complete declaration of conformity is shown on our website at:

KM-206R:
https://www.inter-tech.de/produktdetails-190/KM-206R_EN.html

KM-206L:
https://www.inter-tech.de/produktdetails-190/KM-206L_EN.html

KM-206WR:
https://www.inter-tech.de/produktdetails-190/KM-206WR_EN.html

Each in the Download area.

Eterno